




MÉTHODE DE CHARGEMENT
 Branchez maintenant le câble de chargement USB dans le bloc d'alimentation pour l'alimentation.
 Illustration et assurez-vous que le connecteur est sécurisé et correct.
 Connectez le connecteur de la batterie au connecteur de charge USB comme indiqué sur le chargement.


CHARGER LA BATTERIE

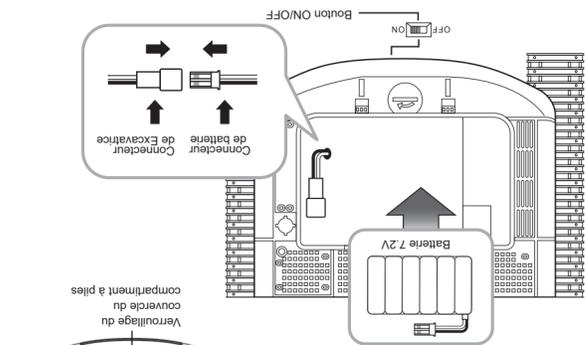

1. Dévissez le loquet pour ouvrir le couvercle du compartiment des piles.
 2. Connectez le connecteur de la batterie au connecteur de l'excavatrice et placez la batterie dans le compartiment.
 3. Fermez le compartiment à piles et verrouillez-le avec le verrou tournant.


INSÉREZ LA BATTERIE

FONCTIONS DE LA TÉLÉCOMMANDE

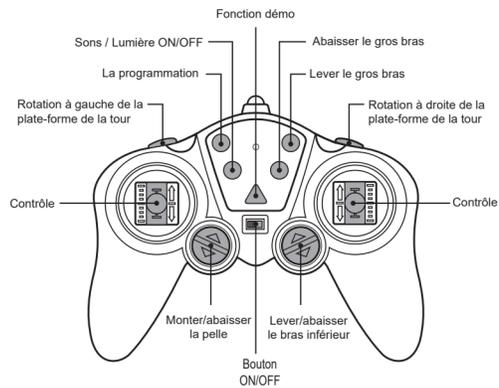




INSÉREZ LES PILES

1. Desserrez le vis du couvercle avec un tournevis.
2. Placez deux piles AA de 1,5 V dans le compartiment à piles, en faisant attention à la bonne polarité.
3. Fermez le compartiment à piles et resserrez la vis.

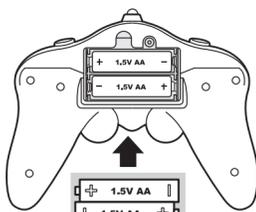


REMARQUES SUR LES PILES

- Les batteries ne doivent pas être chargées!
- Des piles différentes ou des piles anciennes et usées ne doivent pas être mélangées.
- Les piles doivent être insérées avec la polarité correcte.
- Les piles vides doivent être retirées de la télécommande.
- Les fiches ne doivent pas être court-circuitées.
- La batterie ne peut être chargée que sous la surveillance d'un adulte.
- N'utilisez pas de piles rechargeables dans la télécommande.

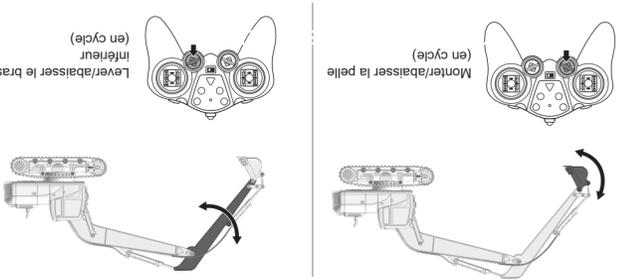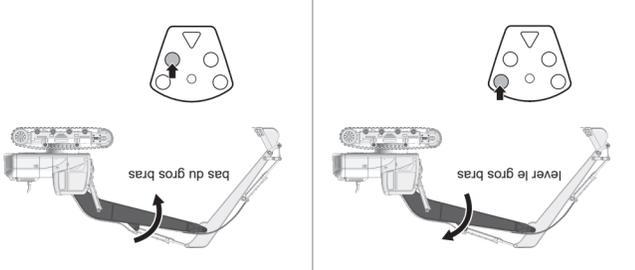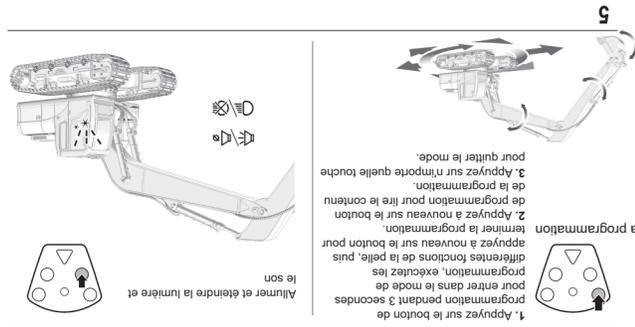


CONTRÔLE

FONCTION DÉMO

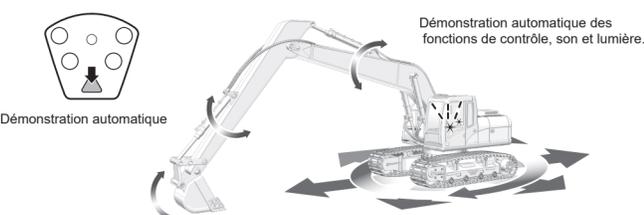


REPLACEMENT DES ACCESSOIRES




1. Retirez d'abord le vis fixant la pelle (Fig.1) puis retirez la pelle (Fig.2).

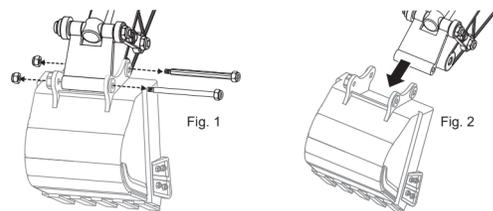

2. Assemblez les pièces sur le bras inférieur, insérez les vis et serrez les écrous.

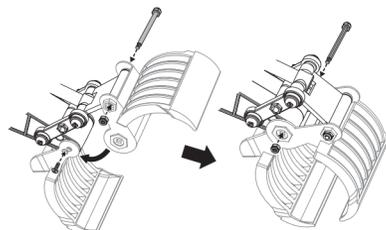

Grappin à bûches (vendu séparément)

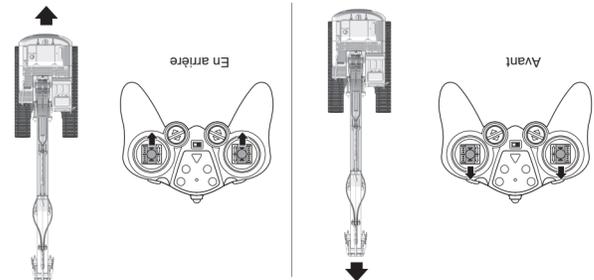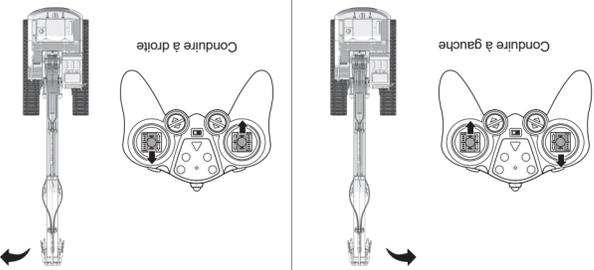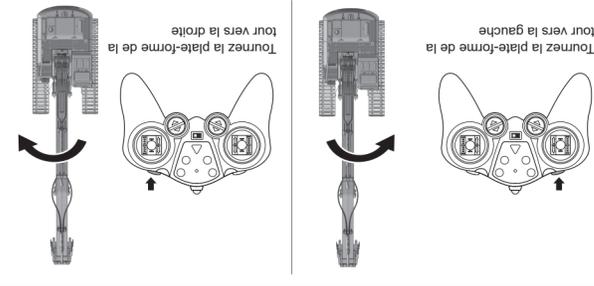

CONTRÔLE

Declaration of Conformity

This product has been manufactured according to actual technical standards. The product is matching the requirements of the existing European and national guidelines. The Declaration of Conformity has been proved. AMEWI Trade e.K. declares that this product is matching the basic requirements and remaining regulations of the guideline 2014/53/EU (RED). The declarations and documents are stored at the manufacturer and can be requested and applied there.

The full text of the declaration of conformity can be found at: <https://amewi.com/Konformitaetserklarungen>

For additional questions to the product and conformity please contact:
 Amewi Trade e.K. Nikolaus-Otto-Str. 18, 33178 Borchen or via the website amewi.com



Security and Hazard Warnings

- Warning!** For damage, caused by disregarding of the manual, warranty expires!
- Warning!** We are not liable for secondary failures, material or personal damage, caused by improper usage or disregarding the security notices.
- Warning!** Based on security and registration (CE) reasons, it is forbidden to modify the product personally. Do not disassemble the product.
- Warning!** Small parts. Danger of suffocation or risk of injury caused by small parts.



The product is not allowed to get moist or wet. Even a drop down from a small height can cause damage to the product.

Battery Notice and Battery Disposal

- Warning!** Battery do not belong in childrens hands. A change of the battery has to be done by an adult person. Never mix chargeable batteries with non-chargeable batteries. Never mix fully charged batteries with almost empty batteries. Never mix batteries of different capacities. Never try to charge dry batteries. Take care of the correct polarity. Defective batteries belong to special waste. Never leave a charging battery unattended. For questions about the charging time please read the manual or ask the manufacturer.

Disposal

The company AMEWI is registered below the WEEE Reg. Nr. DE93834722 at the foundation EAR and recycles all used electronic parts properly. Electric and electronic products are not allowed to put in household garbage. Please dispose the product at the end of the lifetime according to the actual laws. You as a customer are responsible by law for the return of all used batteries, a disposal over the household garbage is forbidden!



Batteries containing hazardous substances are marked with the alongside symbols, which point to the prohibition of disposal in household garbage.

Additional notations for the critical heavy metal are: Cd=Cadmium, Hg=Quecksilber, Pb=lead (Label is placed on the batteries, for example below the bottom left trash symbols).




Based on RoHS labeling the manufacturer confirms, that all limit values were taken care of at the time of manufacturing.



Batteries labeled with the recycling symbol can be put into used battery collecting tank. (Most supermarkets have) They are not allowed to be put into local household garbage.



AMEWI Trade e.K. is involved in the dual system for boxing over the company Firma Landbell AG. All used boxes are collected from partner companies (waste disposal contractor) at private customers (local household), sorted and properly utilized. The Involvement in a Dual Systems helps to save CO₂ Emissions.

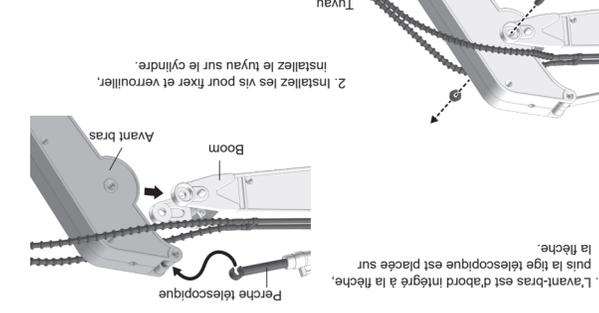

ASSEMBLAGE DU BRAS INFÉRIEUR



Placez la batterie dans l'excavatrice et les batteries dans la télécommande. Allumez la télécommande, puis allumez le véhicule. La LED de l'émetteur clignote d'abord puis reste allumée en permanence. Un signal retentit, cela signifie que la connexion a été établie. Si cela ne fonctionne pas, répétez le processus.

ALLUMEZ LE EXCAVATRICE ET L'ÉMETTEUR

MANUEL



1:14 EXCAVATRICE RC G211E

N ° d'article: 22545



INFORMATIONS SUR LA PUISSANCE MAXIMALE D'ENVOI
 Fréquence de fonctionnement : 2 405 ~ 2 475 MHz
 Force de fréquence radio maximale: puissance de crête maximale 5 dBm

AMEWI TRADE e.K.
 Nikolaus-Otto-Str. 18, 33178 Borchen
 amewi.com; info@amewi.com